

INSTALL INSTRUCTIONS:

1. REMOVE CANOPY COVER PLATES
2. MOUNT CANOPY TO CEILING WITH HARDWARE PACK
3. ADJUST THE OVERALL LENGTH BY ADJUSTING THE CABLE
4. MAKE ELECTRICAL CONNECTIONS
5. REINSTALL CANOPY COVER PLATES
6. INSTALL GLASS (**SEE NOTE BELOW TO ATTACH GLASS**)


ELECTRICAL

TWO WIRES ARE RUNNING ALONG THE AIRCRAFT CABLE
****WIRE THE CABLES INDIVIDUALLY TO EACH DRIVER****

GLASS ASSEMBLY INSTRUCTIONS:

PLACE INNER LENS ON FIRST, USING SILICON WASHER BETWEEN LENS AND BODY, AND SILICON WASHER BETWEEN LENS AND BRASS CAP

PLACE OUTER LENS ON SECOND, USING SILICON WASHER BETWEEN SPACER AND LENS, AND SILICON WASHER BETWEEN LENS AND BRASS CAP.

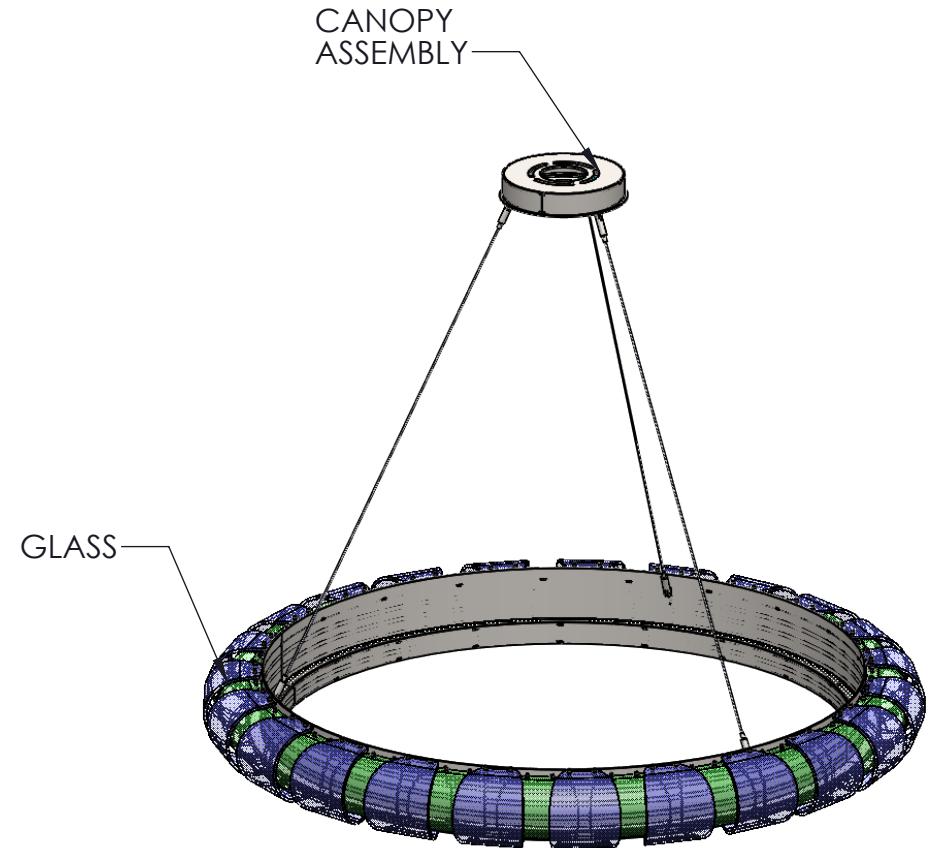

****HANG THE FIXTURE FIRST AND THEN INSTALL THE LENS
INSTALLING THE LENS BEFORE HANGING THE LIGHT BODY
MIGHT CAUSE DAMAGE TO THE LENS OR EVEN BEND/BREAK IT****



Hammerton
217 N. WRIGHT BROS DR.
SLC, UT 84116
(801) 973-8095

© Copyright 2004
All rights in design, detail or
invention of this drawing are
reserved as the property of
Hammerton. Any limitation of
adaptation without written
consent is strictly prohibited.

CHA2176-L

ASSEMBLY INSTRUCTIONS